

SEALEGS QUICKSTART GUIDE

(I) START INBOARD

BATTERY ISOLATOR to on position

SPEED JOYSTICK to neutral

INBOARD THROTTLE to midway position

OUTBOARD KEY to first position

ENGINE ON/OFF SWITCH to on position (fan will run, leave for 4 minutes)

ENGINE START SWITCH to on position (momentarily until inboard starts)

ENGINE CHOKE SWITCH to on position (momentarily while starting, if cold)


INBOARD THROTTLE to fast (once inboard idled for 20 seconds)



BATTERY ISOLATOR



SPEED JOYSTICK

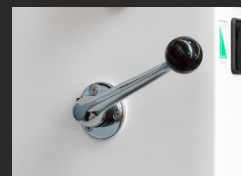

INBOARD THROTTLE



OUTBOARD KEY

(II) STOP INBOARD

INBOARD THROTTLE to idle (for 20 seconds)

ENGINE ON/OFF SWITCH to off position

IGNITION KEY to off position

BATTERY ISOLATOR to off position

SEALEGS®

BE AMPHIBIOUS



INBOARD CONTROLS



OUTBOARD CONTROLLER



OUTBOARD TRIM



BOW/STERN WHEELS



ENTERING WATER

OUTBOARD CONTROLLER to neutral

OUTBOARD TRIM to top of trim

OUTBOARD KEY on (once prop. is submerged, until outboard starts)

OUTBOARD CONTROLLER to forward

SPEED JOYSTICK to neutral (once craft floats)

BOW WHEEL UP (until buzzer sounds and leg fully retracted)

STERN WHEELS UP (until legs fully retracted)

STOP INBOARD as over page

OUTBOARD TRIM down to desired position



EXITING WATER

OUTBOARD CONTROLLER to forward (max 5 knots craft speed)

OUTBOARD TRIM to top of trim

START INBOARD as over page

BOW WHEEL DOWN (until buzzer sounds and wheel locks in)

STERN WHEEL DOWN (until buzzer sounds and wheels lock in)

SPEED JOYSTICK forward

OUTBOARD CONTROLLER to neutral position (when fully driving on land)

OUTBOARD KEY off (before prop. leaves water)